


3 – Remove front entrance cover strip

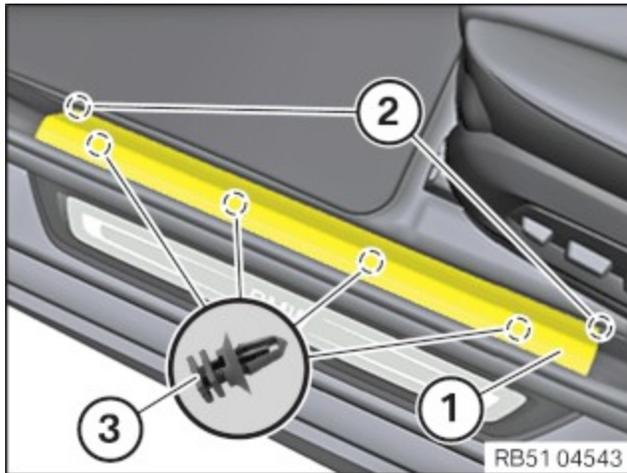

RISK OF DAMAGE

Bending of plastic parts.


Application of too much force can lead to bending of plastic parts.

Place special tool directly beside the mounting clip.


Continue unclipping the part without using the tool if possible.

Pull the front door sill cover strip (1) slightly inward in area (2) and detach it from the clips (3) to the top.

4 – Remove rear entrance cover strip

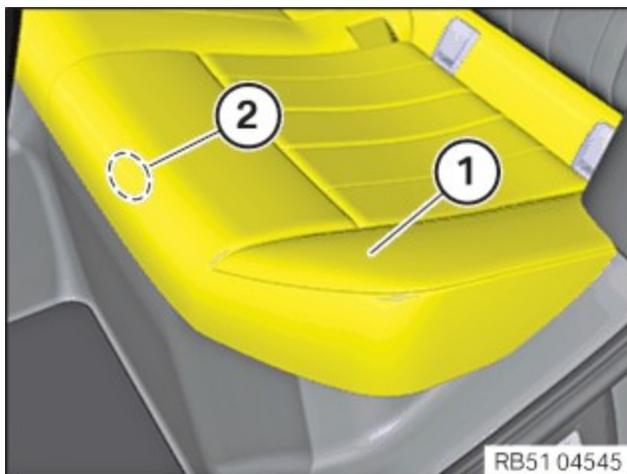

Release rear seat (1) in area (2) in upward direction from the latch mechanisms.

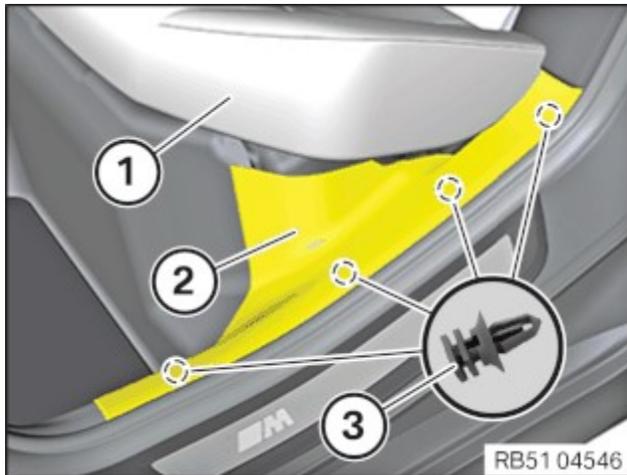

RISK OF DAMAGE

Bending of plastic parts.

Application of too much force can lead to bending of plastic parts.

Place special tool directly beside the mounting clip.


Continue unclipping the part without using the tool if possible.

Raise the rear seat (1) slightly.

Release the rear door sill cover strip (2) upwards from the clips (3) and remove it.

2 – Remove left backrest side section


► Remove armrest side section

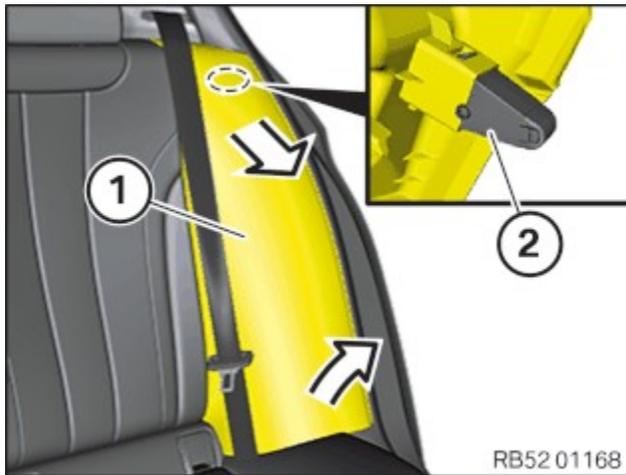

Reach behind the backrest side section (1) from the top and unclip the backrest side section (1) from the latch mechanism (2) to the front.

Remove the backrest side section (1) from the rear seat in direction of arrow.

3 – Remove the right footwell trim

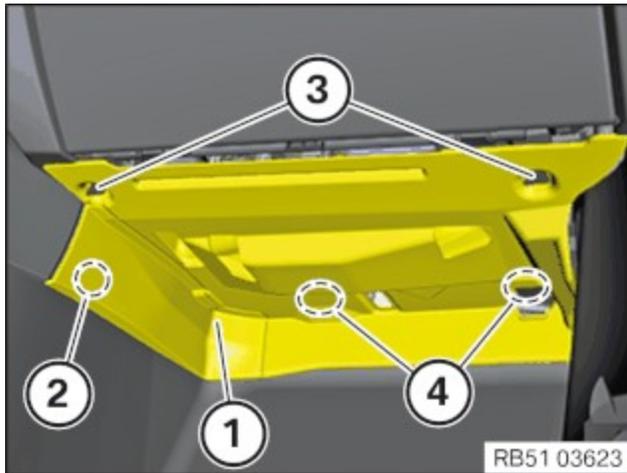


Unclip the right footwell trim (1) toward the inside in this area (2).

Turn the locks (3) by 90°.

Detach the right footwell trim (1) inward from the guides (4).

Unlock associated plug connection and disconnect.

4 – Remove front entrance cover strip

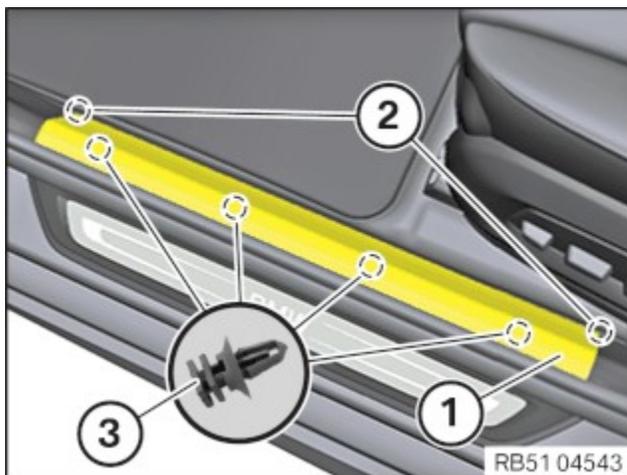

RISK OF DAMAGE

Bending of plastic parts.


Application of too much force can lead to bending of plastic parts.

Place special tool directly beside the mounting clip.

Continue unclipping the part without using the tool if possible.

Pull the front door sill cover strip (1) slightly inward in area (2) and detach it from the clips (3) to the top.


5 – Removing the side trim panel in the footwell at the right-hand A-pillar

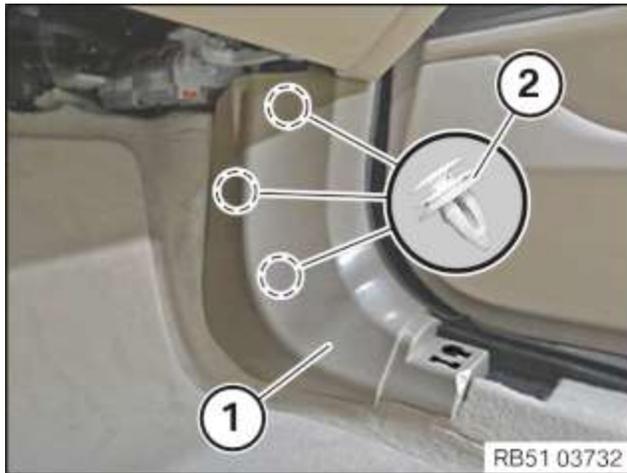

Loosen the side trim panel (1) at the clips (2) and remove it toward the inside.


MAIN WORK

6 – Remove the BDC control unit

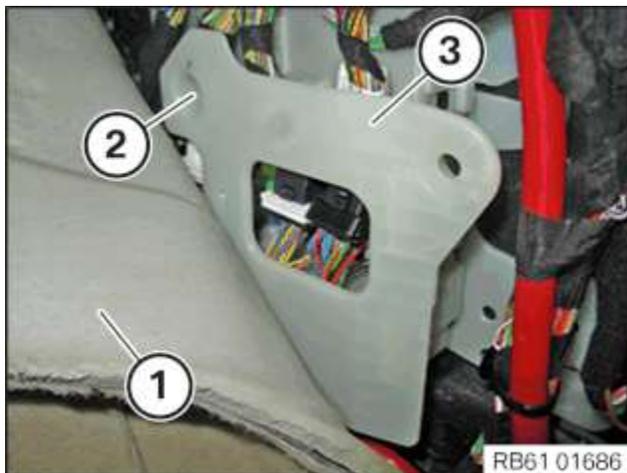

Fold the carpet (1) to the side.

Loosen screw (2) on the cover (3).

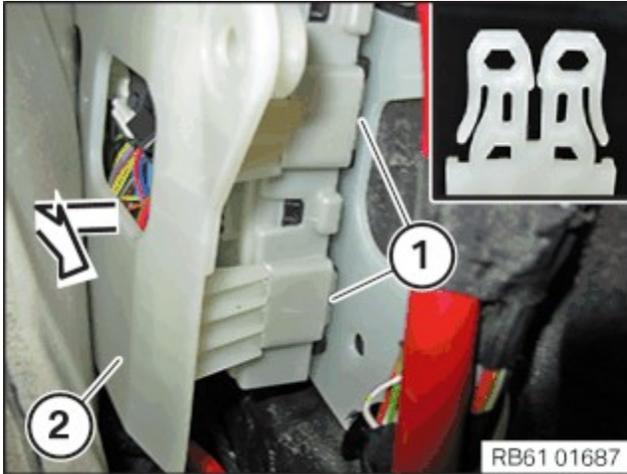

Loosen the latch mechanisms (1).

Guide cover (2) out in direction of arrow.

PRELIMINARY WORK


1 – Remove the tailgate lift switch

Prerequisite

Tailgate is open.




Lever the switch for the tailgate lift (1) out of the tailgate trim panel (2) with the special tool 0 496 571 (00 9 327).

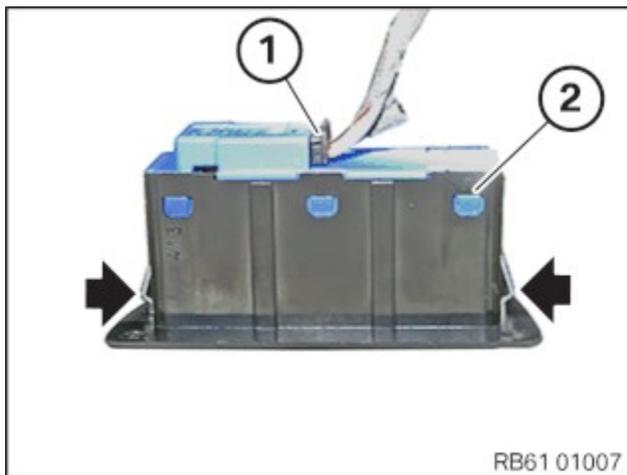


Unlock and disconnect the connector (1) on the switch (2).

2 – Remove tailgate trim panel

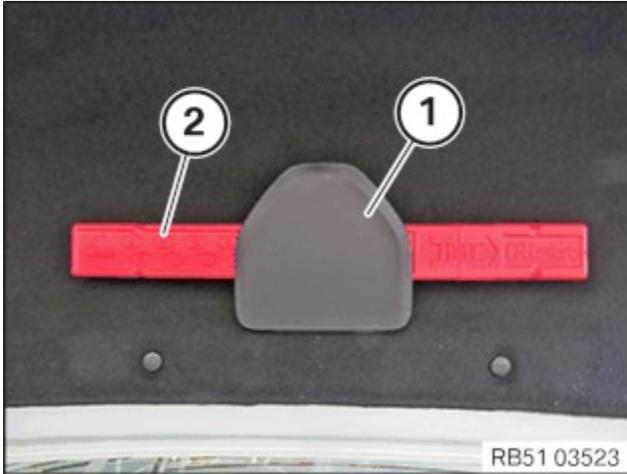

Fold the cover (1) towards the bottom.

Remove the warning triangle (2).

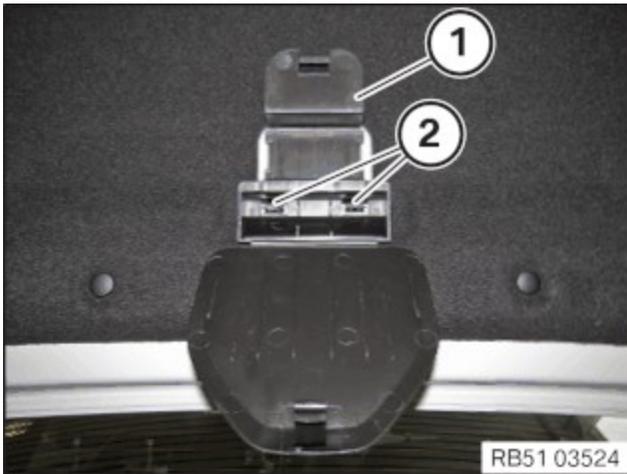

Detach the holders (1) at the latch mechanisms (2) and remove them towards the bottom.



Loosen expanding rivet (1).

Loosen the latch mechanisms (2).


Detach the clip (3) and remove the cover (4).



Remove all expanding rivets (arrows).

Detach the tailgate trim panel (1) from the clips (2) and remove.

Rear Tail Light Wiring

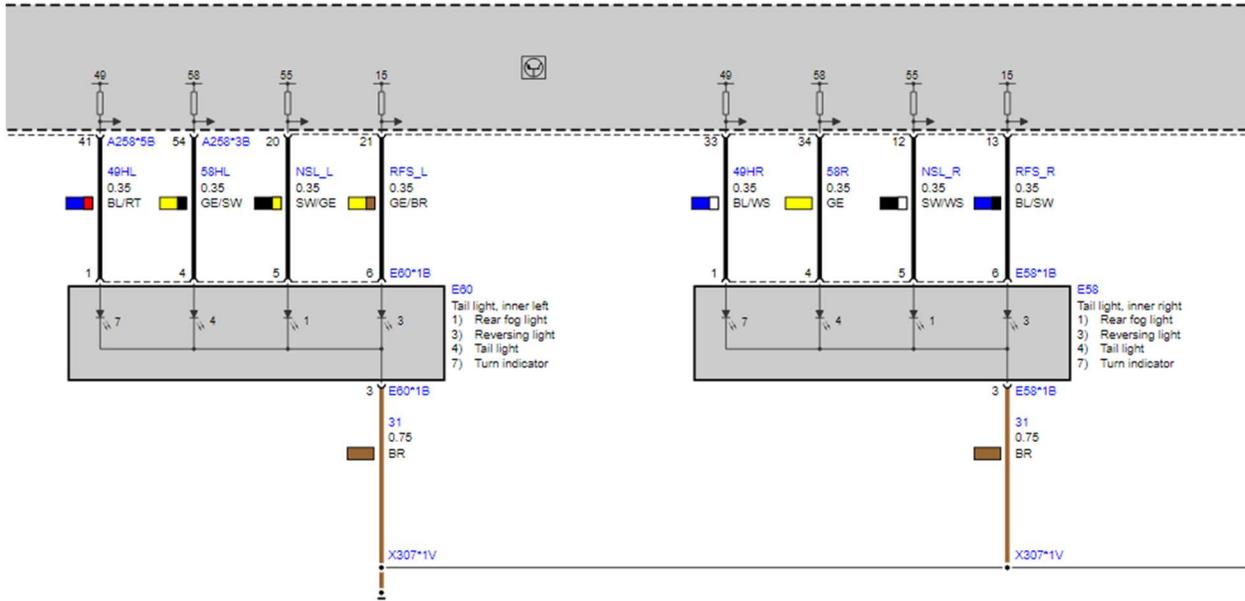

BDC A258*5B Location:

