


51 47 151 Removing and installing/replacing left luggage compartment wheel arch panel


PRELIMINARY WORK

1 – Removing the storage shelf

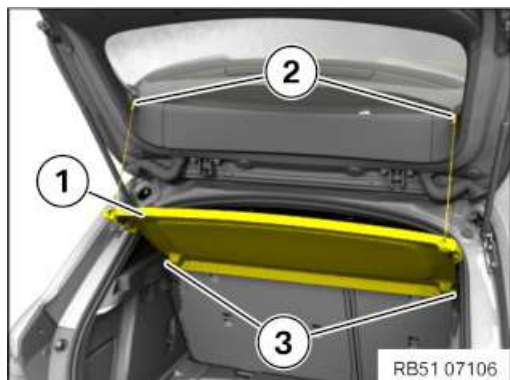

- Remove the retaining strips (2) from the tailgate trim panel.
- Pull out and remove the storage shelf (1) from the guides (3).


2 – If installed: Removing the luggage compartment removable panel

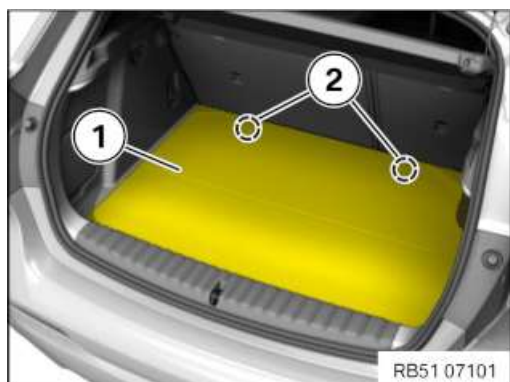


- Raise the luggage compartment removable panel (1) slightly, detach it from the latch mechanisms (2) and remove towards the back.

3 – Removing the luggage compartment floor trim panel

► If installed: Removing lashing eyes

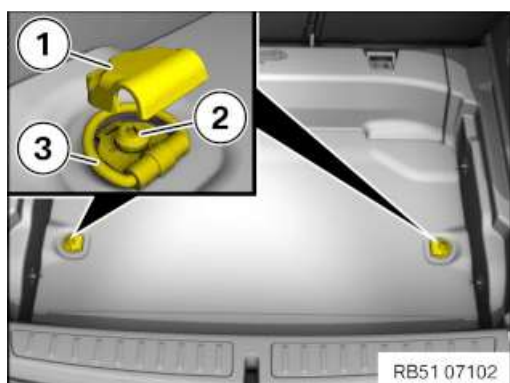

- Remove the covers (1).
- Loosen screws (2).
- Remove lashing eyes (3).

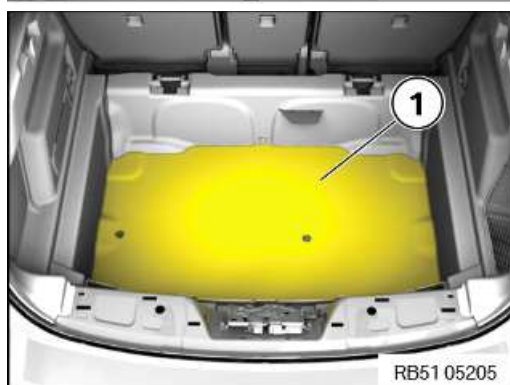

- Remove the luggage compartment floor trim panel (1) upwards.




4 – Removing the loading edge trim




NOTICE

Schematic diagram is for example purposes. Some parts may differ in certain details.

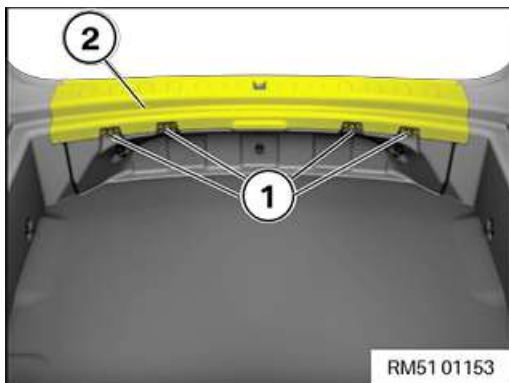

- Open the expanding rivets (1) of the load edge trim (2).

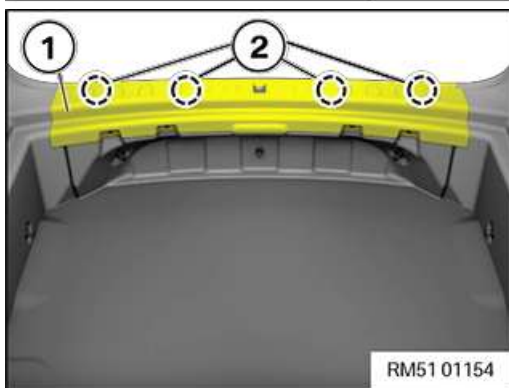

- Unclip the trim of the loading edge (1) at the latch mechanisms (2) in an upward direction and remove.


5 – Remove armrest side section

► Removing backrest side section without airbag



NOTICE

Schematic diagram is for example purposes. Some parts may differ in certain details.

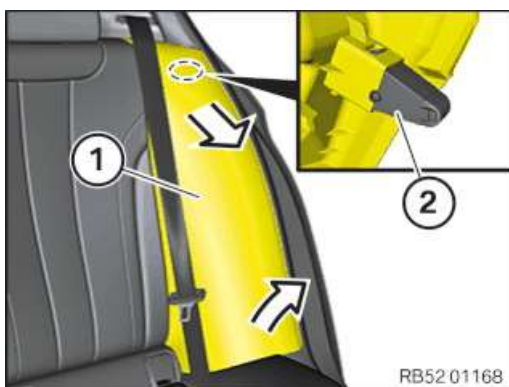

- Grab the backrest side section (1) from the top at the rear.
- Unclip backrest side section (1) from the latch mechanism to the front (2) .
- Remove the backrest side section (1) from the rear seat in direction of arrow.

MAIN WORK

6 – Remove luggage compartment wheel arch panel


► Removing mounted parts of luggage compartment wheel arch trim panel




NOTICE

Schematic diagram is for example purposes. Some parts may differ in certain details.



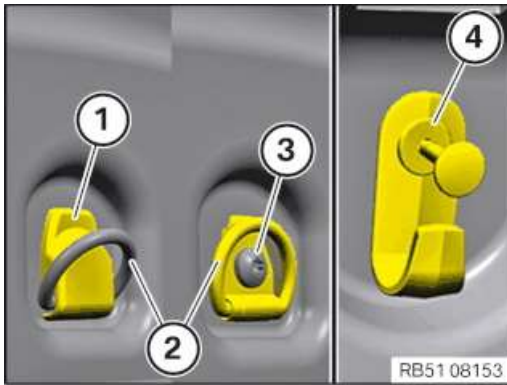


- Unclip covers (1) of lashing eyes (2).
- Release screws (3) of lashing eyes (2).
- Open expanding rivet (4) of bag hook.

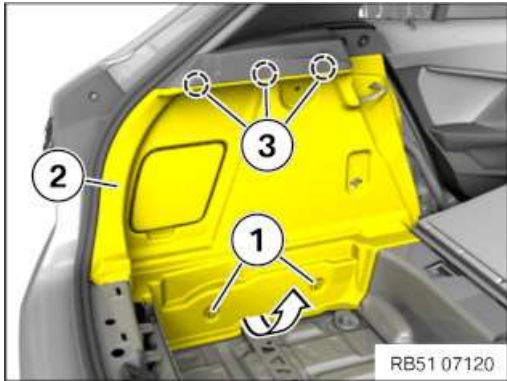

- Reposition left rear seat backrest.
- Loosen the expanding rivet (1).
- Thread the luggage compartment wheel arch trim panel (2) from the sealing lip of the tailgate seal.
- Pull the luggage compartment wheel arch trim panel (2) out of the guides (3) at the bottom in the direction of the arrow.
- Remove luggage compartment wheel arch trim panel (2).

7 – Install luggage compartment wheel arch panel

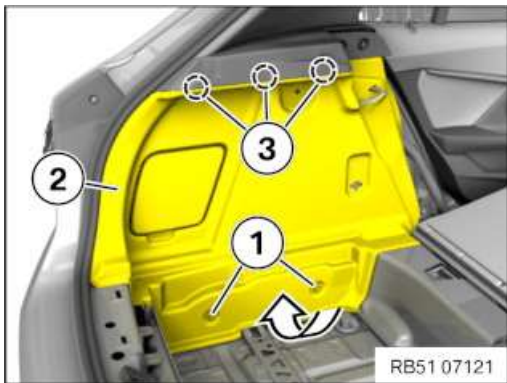


- Feed luggage compartment wheel arch trim panel (2) in direction of arrow into guides (3) and install.
- Feed in luggage compartment wheel arch trim panel (2) under sealing lip of seal for tailgate.
- Secure expanding rivet (1).
- Raise the link rear seat backrest.

► Installing mounted parts of luggage compartment wheel arch trim panel



NOTICE

Schematic diagram is for example purposes. Some parts may differ in certain details.

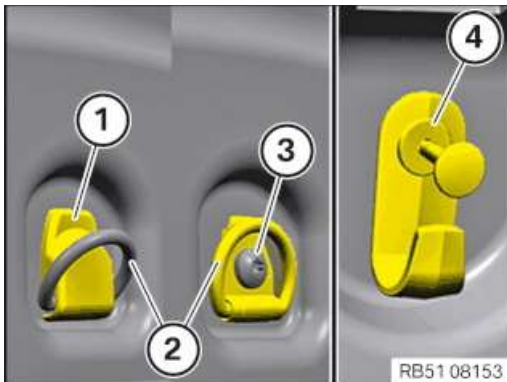

- Secure bag hook with expanding rivet (4).
- Tighten screws (3) of lashing eyes (2).

Lashing eye to body

M8 screw		Tightening torque	19 Nm
----------	--	-------------------	-------

- Clip in covers (1) of lashing eyes (2).



POSTPROCESSES

8 – Installing backrest side section



► Installing backrest side section without airbag

- Feed backrest side section (1) with the clamping brackets (3) into the guides (2).

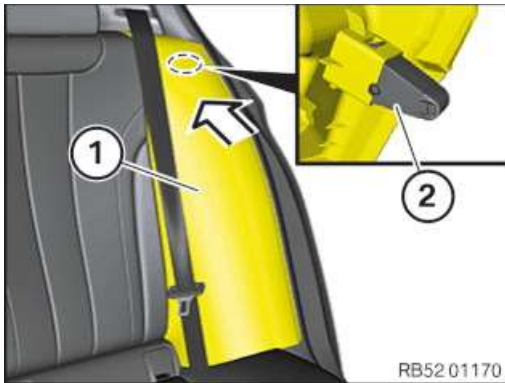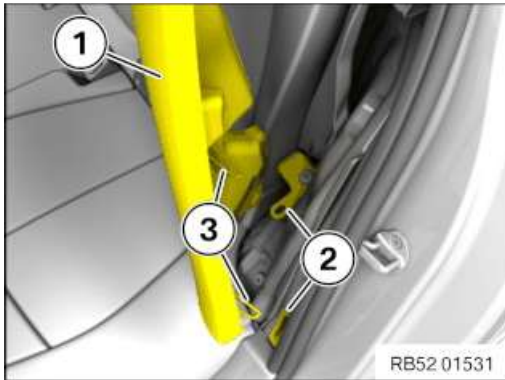

NOTICE

Schematic diagram is for example purposes. Some parts may differ in certain details.


- Clip in the top backrest side section (1) at the latch mechanism (2).

9 – Installing loading edge trim




NOTICE

Schematic diagram is for example purposes. Some parts may differ in certain details.

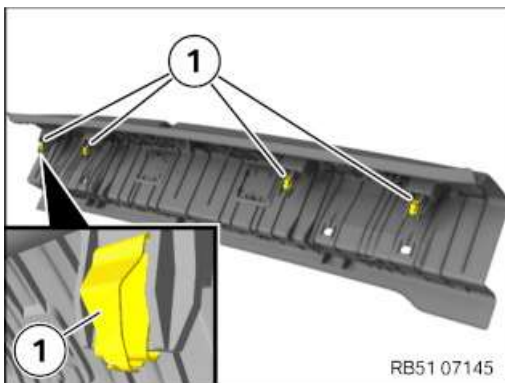


- Check the clamps (1) for damage and renew if necessary.

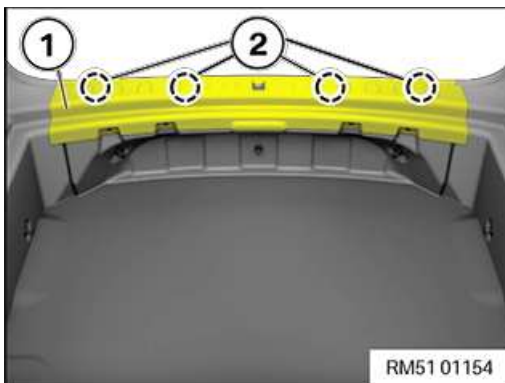


- Thread in the loading edge trim (1) under the sealing lip of the tailgate seal.
- Fit the trim of the loading edge (1) at the latch mechanisms (2) and clip it in to the bottom.



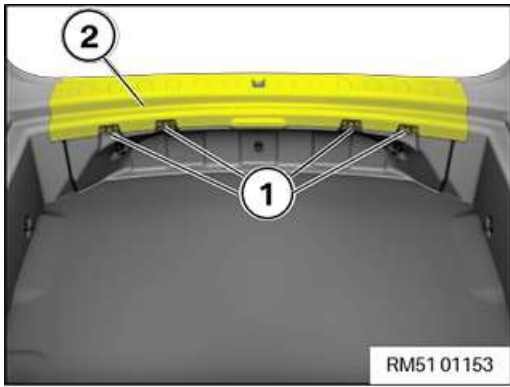


- Secure expanding rivet (1) of the loading edge trim (2).

10 – Installing the luggage compartment floor trim panel

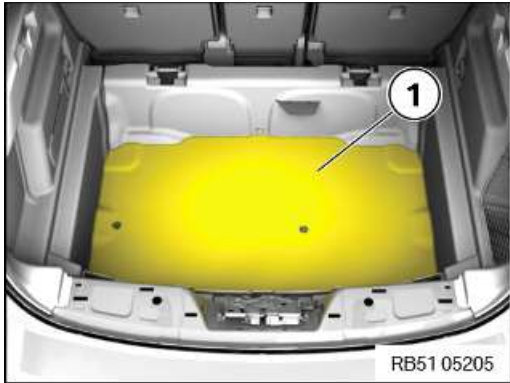

- Position the luggage compartment floor trim panel (1).

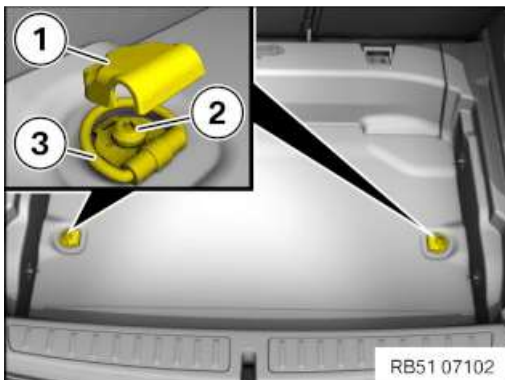

► If installed: Installing lashing eyes


- Position lashing eyes (3).
- Tighten the screws (2).

Lashing eye to body

M8 screw		Tightening torque	19 Nm
----------	--	-------------------	-------

- Install covers (1).


11 – If installed: Installing the luggage compartment removable panel

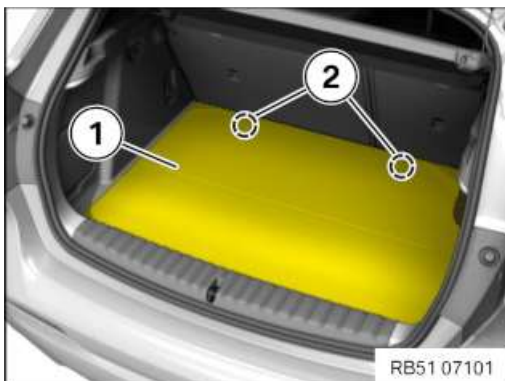

- Clip luggage compartment removable panel (1) into latch mechanisms (2) and set down.

12 – Installing the storage shelf



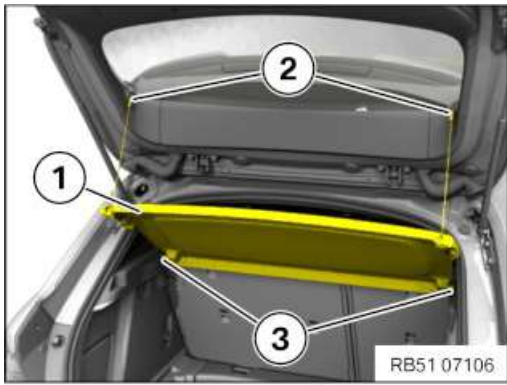

- Insert rear shelf (1) into the guides (3).
- Attach retaining straps (2) to the tailgate trim panel.

Additional Information

Overview of Tightening Torques

Lashing eye to body

Used in step 710

M8 screw		Tightening torque	19 Nm
----------	--	-------------------	-------

Links

Repair instructions	Used in step
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting the battery earth lead (all battery earth leads)	58
61 20 900 Disconnecting and connecting the battery earth lead (all battery earth leads)	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting the battery earth lead (all battery earth leads)	58
61 20 900 Disconnect and connect battery earth lead (Plug-in Hybrid Electric Vehicle)	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting the battery earth lead (all battery earth leads)	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58
61 20 900 Disconnecting and connecting battery earth lead	58

